


PROJECTION	Item No	Ref. Number	Description	No Off	Material
	1	12513	200DP Vertical	1	AL/AL
	2	50051/2	1/4" BSP Straight Compression Nipple	2	Stainless Steel
	3	50054/1	1/8" BSP Standpipe	2	Stainless Steel

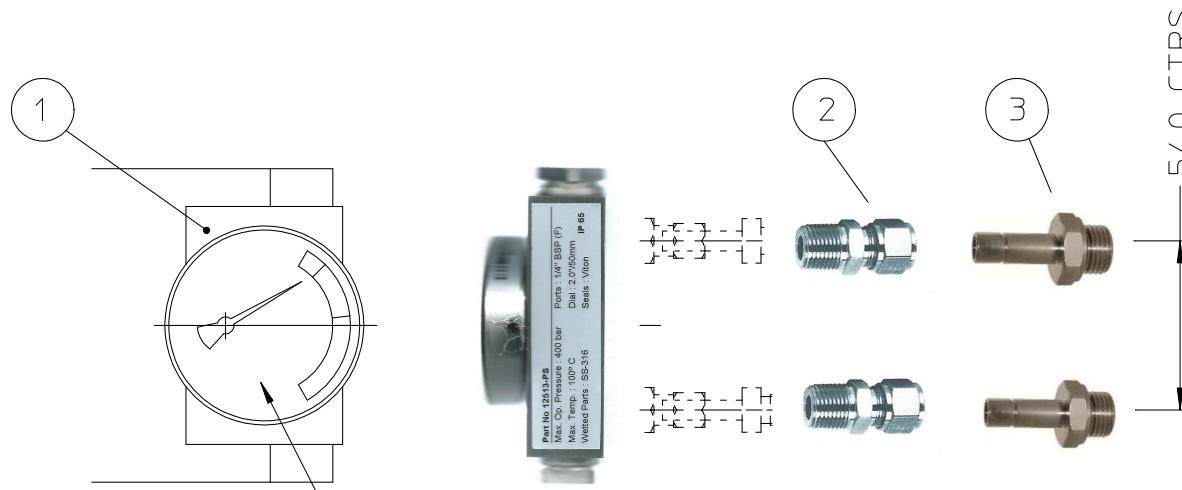

Assembly Instructions:-

1. Remove blanking screws from body of strainer.
2. Wrap PTFE tape around exposed threads of item 2 & 3.
3. Insert Item 2 into gauge loosely, **DO NOT** tighten.
4. Insert item 3 into filter body, **DO NOT** tighten.
5. Align and push gauge (fitted with item 2) onto filter (fitted with item 3). Ensure gauge is the correct way up.
6. Tighten Item 3 into filter body firmly, **DO NOT** over-tighten.
7. Tighten item 2 into gauge firmly, **DO NOT** over-tighten.
8. Check gauge is still pushed firmly onto connecting pieces.
9. Tighten the central compression nut of item 2 onto the coupling stem of item 3, compressing the sealing olive within the joint.

NOTE:-

TO BE SUPPLIED IN COMPONENT FORM AND PACKAGE IN CARTON FOR CUSTOMER ASSEMBLY

MATERIAL	DESCRIPTION
OXFORD FILTRATION LIMITED	D.P. INDICATOR KIT DUAL AND SINGLE FILTERS
<small>© 2011 This drawing and the design is the property of OXFORD FILTRATION LIMITED and may not be copied or used for any purpose other than that for which it was supplied unless expressly stated in writing.</small>	
DRG NO.	12075
ISS	2